OPERATING INSTRUCTIONS
RECHARGEABLE TRIMMERS

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

To reduce the risk of death or injury by electric shock:

1 .Do not reach for a charger that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store clipper where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug clipper from the electrical outlet immediately after using.
5. Unplug clipper before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. This appliance is not suitable for use by people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
4. Do not carry this appliance by supply cord or use cord as a handle.
5. Keep the cord away from heated surfaces.
6. Make sure cord is not twisted or kinked while unit is charging or being stored.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use this appliance with damaged or broken blades, as facial injury may occur.
11. Do not use non-rechargeable batteries. Battery should only be obtained from an authorized Wahl Service Center
12. Use only the charger supplied by the manufacturer to recharge.

SAVE THESE INSTRUCTIONS

USING RECHARGEABLE TRIMMERS

• Remove the Trimmer and Recharging cord from the packaging material.

• Plug Recharging cord into any convenient electrical outlet at the correct voltage.

• Plug recharging cord into trimmer and initially charge for 16 hours. Be sure Trimmer is in the OFF position when charging.

• To prolong the life of your unit, you should completely discharge the battery at least once a month by leaving the unit off the cord between uses and running it until it stops.

• Trimmer blades have very precise hardened, ground, and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive materials.

• To clean the unit, use either a clean, dry or dampened cloth. DO NOT USE benzene or thinner to clean the unit.

TROUBLESHOOTING

If your rechargeable trimmer does not seem to be operating or charging properly, please check the following:

Check the outlet's current by plugging another appliance (one you know is in proper working condition) into the outlet. Make sure the unit is not connected to a power source that turns itself off when lights are turned off.

Verify that the blade assembly moves freely and is mounted properly.

If you still encounter problems with your unit, ship both your trimmer and its recharging cord, prepaid, to our factory with a note explaining the problem:

Attn: Repair Department
Wahl Annex
3001 North Locust
P.O. Box 578
Sterling, IL 61081

OILING CAUTION

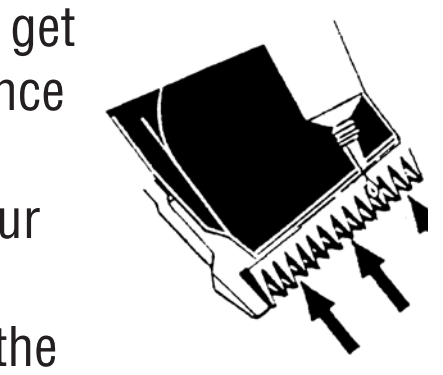

In order to ensure that you get the most life and performance out of your trimmer, we recommend that you oil your unit daily. To oil it properly, the unit should be held so the blades are in a downward position as shown. With the trimmer blade running, dispense 2-3 drops of oil across the top blade. (Use Wahl Clipper Oil ONLY.)

Wipe off excess oil so it does not run into the motor compartment. Oil in the motor compartment will eventually lead to poor motor performance.

Blades should be oiled after using disinfectant or sanitizing solution.

LIMITED 1 (ONE) YEAR WARRANTY

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as a gift, Wahl will at our option repair or replace it and return it to you FREE OF CHARGE. Our warranty does not cover blades which are wear out parts. Please mail your product prepaid to Wahl Clipper Corporation ,3100 Norht Locust Street, Sterling, Illinois 61081, Attention: Repair Department, with a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges.

This warranty is void and no repair or replacement will be made under this warranty or otherwise if:

1. The product is modified in any manner.
2. The product is repaired by anyone other than Wahl Clipper Corporation
3. The product has been subject to unreasonable use.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty including any warranty of merchantability, which may arise from purchase or use is limited to the one-year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Warranty valid only in the United States.

For products purchased in Europe return to: Wahl UK, Herne Bay Trade Park, Sea Street, Herne Bay, Kent CT6 8JZ, England
For products purchased outside of the United States contact your distributor.

GARANTIA LIMITADA POR UN (1) AÑO

Si su producto no llegará a opera satisfactoriamente en el período de un (1) año, desde . fecha de la compra original o de haberlo recibido como regalo, Wahl lo reparará o reemplazará . a su criterio y se lo enviará GRATU ITAMENTE Nuestra garantía no cubre las hojas, las cuales son partes deszastables. Por favor envíe su producto con íranqueo pagado a Wahl Clipper Corporation, ,3100 Norht Locust Street, Sterling, Illinois 61031, Atención: Departamento de reparaciónes, con una nota describiendo el defecto y con el recibo de compra original o el recibo como regalo (si aún está bajo garatiría). Los productos fuera de garantía serán reparados a nuestros precios originales de reparación.

Esta garantía no es válida y no se hara ninguna reparación o reemplazo si el producto:

1. Ha sido modificado en cualquier manera.
2. Ha sido reparado por otro que no sea Wahl Clipper Corporation .
3. Ha sido sometido a una utilización inadecuada.

Esta garantía le brinda derechos legales específicos y usted puede adquirir otros derechos, los cuales varían de un estado a otro. No se brinda ninguna otra zarantía expresa. Cualguier garanúa implícita incluyendo cualguier guaratía mercantil la al podria surgir por la compra ola utilización, está limitada al período de un año proporcionado en esta garantía expresa. Algunos estados no permihrán tal limitación; por o tanto tal vez no se aplique a usted. No se asumirá ninguna respons.abilidad por daños accidentales o consiguientes de cualquier tipo o por la utilización de dispositivos no autorizados. Algunos estados no permitirán tal exclusión o limitación; por lo tanto tal vez no se aplique a usted. Garantía válida solamente en Estados Unidos de Norteamérica.

Para productos comprados en Europa, devuelvalos a: Wahh UK, Herne Bay Trace Park, Sea Street, Herne Bay, Kent CT6 8JZ, Inglaterra
Para productos comprados fuera de Estados Unidos, comuniquese con su distribuidor.

GARANTIE LIMITÉE D'UN AN

Si le produit Wahl cesse de fonctionner de façon satisfaisante en deçà d'un an, à compter de la date d'achat initiale ou de réception en cadeau, Wahl s'engage, à son gré, à le réparer ou à le remplacer, et à le retourner SANS FRAIS à l'expéditeur. La garantie ne couvre pas les lames, les brosses ou d'autres pièces d'usure. Le produit défectueux doit être envoyé, port payé, à Wahl Clipper Corporation, 3100 N. Locust Street, Sterling, Illinois 61081, Attention: Repair Department, accompagné d'une note décrivant le défaut et indiquant la date d'achat initiale ou de réception en cadeau (s'il est couvert par la garantie). Le produit non couvert par la garantie est réparé moyennant des frais de réparation standard.

La présente garantie est nulle et non avenue, et aucune réparation ni aucun remplacement ne sont effectués, au titre de la présente garantie, ou autrement si :

1) le produit a été modifié de quelque manière que ce soit;
2) le produit a été réparé par toute entité autre que Wahl Clipper Corporation;
3) le produit a été soumis à un usage abusif.

La garantie confère à l'acheteur des droits juridiques précis, qui peut également se prévaloir d'autres droits propres à son État de résidence. Aucune autre garantie expresse écrite n'est donnée. Toute garantie implicite, y compris toute garantie de qualité marchande, découlant de l'achat ou de l'utilisation se limite à une période d'un an, qui est prévue dans la présente garantie expresse. Certains États peuvent ne pas reconnaître la présente garantie limitée, qui alors peut ne pas s'appliquer à l'acheteur. La société décline toute responsabilité à l'égard de dommages accessoires ou consécutifs, quels qu'ils soient, ou de l'utilisation d'accessoires non approuvés. Certains États peuvent ne pas permettre l'exclusion ou la limitation à l'égard de dommages accessoires ou consécutifs, et la limitation ou l'exclusion peut alors ne pas s'appliquer à l'acheteur. Garantie valide aux États-Unis seulement.

Pour des produits achetés en Europe retour de: Wahl UK, Herne Bay Trade Park, Sea Street, Herne Bay, Kent CT6 8JZ, England
Pour des produits achetés en dehors de des Etats-Unis entrez en contact avec votre distributeur.

WAHL INTERNATIONAL
P.O. Box 578
Sterling, Illinois 61081
Fax (815) 625-6780

WAHL UK
Herne Bay Trade Park, Sea Street,
Herne Bay, Kent CT6 8JZ, England
Phone: 1227-740066
Fax: 12227-3675500

WAHL GmbH
Roggenbachweg 9
D-78089 Unterkirnach
Germany
Telefon + 49 / 7721 / 8060
Telefax +49 / 7721 / 806-114

WAHL®

WAHL CLIPPER CORPORATION
2900 Locust St. • Sterling, IL 61081 • (815) 625-6525 • Fax: (815) 625-0091
Form No. 94685 *www.wahlpro.com* Printed in U.S.A.

INSTRUCCIONES DE OPERACIóN PARA LAS RECORTADORAS RECARGABLES

MODE D'EMPLOI TONDEUSES RECHARGEABLES

Including, but not limited to:
No. 8792
No. 8777

Incluyendo pero no limitadas a:
No. 8792
No. 8777

Y compris, mais sans limitation:
Modèle 8792
Modèle 8777

THIS UNIT IS DESIGNED FOR COMMERCIAL USE.

ESTA UNIDAD ESTÁ DISEÑADA PARA USO COMERCIAL.

CETTE UNITÉ EST DESTINÉE À UN USAGE COMMERCIAL.